


EKO

2.0CH DVD PLAYER

EK200DVH

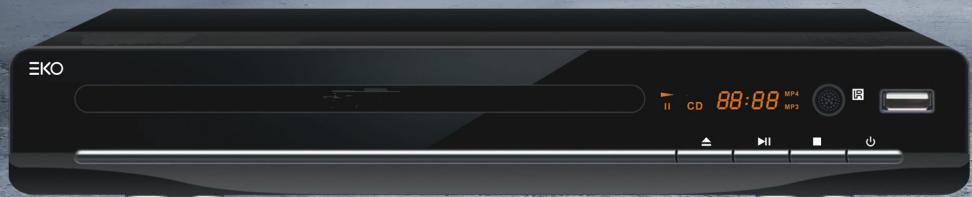

INSTRUCTION MANUAL

Please read this manual carefully before using, and keep it for future reference.

CONTENTS


General Safety	4
Product Overview	7
Remote Control	8
Setup	10
Troubleshooting	12
Specifications	12
Support	Last Page

GENERAL SAFETY

Read this manual thoroughly before you start using the DVD Player.

Store this manual, the completed warranty card, your receipt and the product packaging. The safety precautions instructions reduces the risk of fire, electric shock and injury when correctly complied to.

Please follow all instructions and take notice of all warnings.

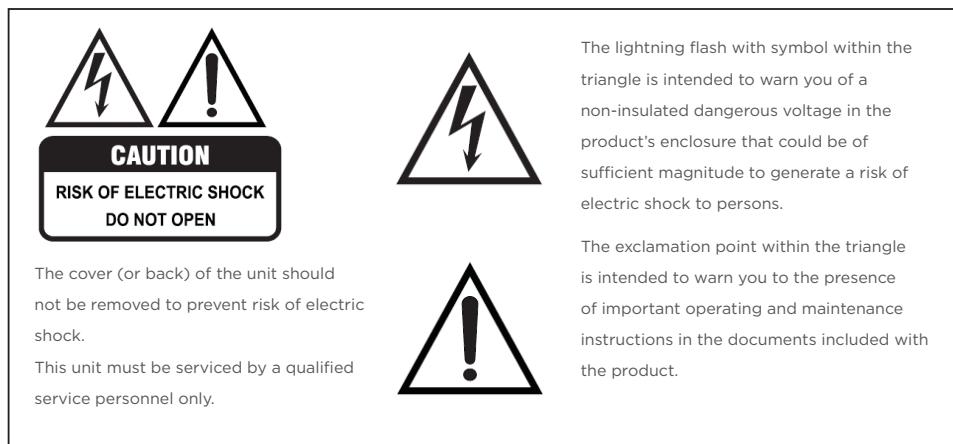

IMPORTANT INFORMATION

The lightning flash symbol within the triangle is intended to warn you of non-insulated dangerous voltage the product's enclosure that could be of sufficient magnitude to generate a risk of electric shock to persons.

- Only using furniture that can safely support the Products.
- Ensure the Product is not overhanging the edge of the supporting furniture.
- Do not place the product on a high furniture without securing both the furniture and the product to a stable support.
- Do not place the product on cloth or other conductive materials.
- Warn children of the dangers of climbing on furniture to reach the DVD Player or its controls and to call for an adult to assist.

GENERAL SAFETY (CONT.)

IMPORTANT INFORMATION

- Do not expose this appliance to rain or moisture as it may result in fire or an electric shock hazard
- Do not temper or change or modify the product in any way.
- Only use Accessories outlined and recommended by the manufacturer.
- Please do not expose the product to splashing or water contact
- Please do not place any object on top of the product including objects filled with liquids such as vases.
- Danger of explosion if battery is incorrectly placed. Replace with same or equivalent type.

This product must be positioned in a sufficiently stable location, it can be potentially hazardous due to falling when mounted and can cause injury, particularly to children if it positioned incorrectly.

- Do not use a damaged power cord, plug or loose outlet. Doing so may cause an electric shock.
- Do not plug several devices into the same outlet. Doing so may cause the outlet to overheat and start a fire. Make sure the outlet is readily accessible during operation of the equipment.
- Do not bend, twist or kink the power cord excessively.
- The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the product. Dry location use only.
- Do not run the power cord near heat-producing appliances such as radiators, stoves or irons. The excessive heat could melt the insulation and expose live wires, resulting in fire or electric shock.
- No naked flame source, such as candles, should be placed on the product.
- Do not allow anything to rest on or roll over the power cord. Doing so may cause fire or electric shock.
- Do not run the power cord near heat-producing appliances such as radiators, stoves or irons. The excessive heat could melt the insulation and expose live wires, resulting in fire or electric shock.
- Unplug the product during lightning storms or when unused for long periods of time. Not doing so may result in fire or electric shock.
- Do not cover the ventilation openings of the product with items such as newspapers, tablecloths, curtains etc or insert objects into the slots available on the products. As this could result in the product temperature rising and could cause a fire.

GENERAL SAFETY (CONT.)

Please make sure upon positioning this product, the place is:

- Not wet or damp and Well ventilated
- Away from direct sunlight or heaters.
- Away from splashes or food.
- Protected from excessive dust or grease.
- Do not install this equipment in a confined space such as a bookcase or similar unit.
- Do not install the DVD Player near heat sources such as radiators, stoves or other audio visual equipment that produce heat.
- Do not place containers with liquids, if liquid falls inside the products it may result in short-circuit, fire or electric shock.
- Do not place small metallic objects on top of the unit. Metal object falls inside the product it may result in short-circuit, fire or electric shock.
- Do not use or store flammable or combustible materials near the unit. Doing so may result in fire or explosion. Do not place any naked flame sources, such as lit candles, cigarettes or incense sticks on top of the DVD Player
- Install the unit at a reasonable distance from the wall to ensure sufficient ventilation.
- If mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.



This symbol indicates that the appliance has double insulation between the dangerous mains voltage and the parts accessible to the user. In the event of repairs use only identical spare parts.

LASER SAFETY

This set employs an optical laser beam system in the disc mechanism designed with built-in safeguards. Do not attempt to disassemble. Exposure to this invisible laser light beam may be harmful to the human eye.




This is a Class-1 laser product. Use of controls, adjustments or procedures other than those specified herein may result in hazardous laser light beam exposure.

This DVD player should not be adjusted or repaired by anyone except qualified service personnel. The laser mechanism in the set corresponds to the stylus (needle) of a record player. Although this product uses a laser pick-up lens, it is completely safe when operated according to directions.

PRODUCT OVERVIEW




- | | | | |
|----|-------------------|----|---------------------|
| 1. | DVD Door | 5. | Power On/Off Button |
| 2. | Open/Close Button | 6. | Display |
| 3. | Play/Pause Button | 7. | USB Port |
| 4. | Stop Button | | |

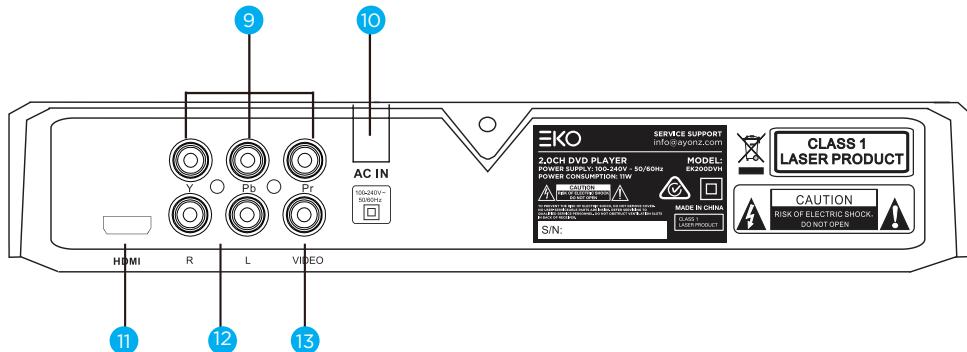

- | | | | |
|-----|--------------------|-----|---------------------------|
| 9. | Y PB PR Output | 12. | Right & Left Audio Output |
| 10. | Power Cable Outlet | 13. | Video Output |
| 11. | HDMI Output | | |

REMOTE CONTROL

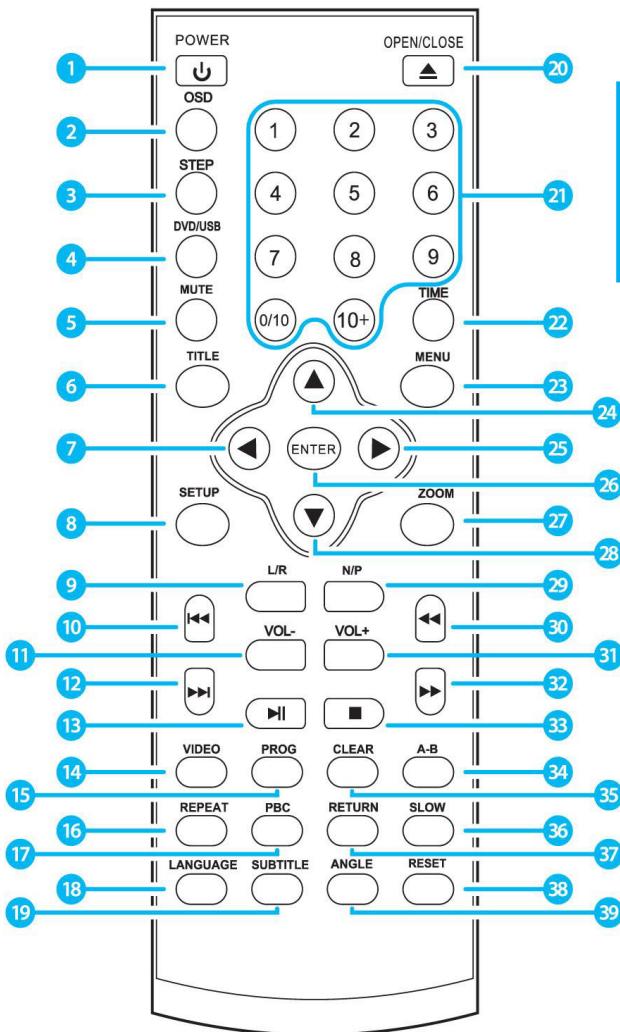

If you are playing a NTSC Disc (International), Please press “N/P” #29 on remote control to switch to NTSC.

Remote Control Functions

1. Power On/Off
2. **OSD** - Press to Display More information
3. **STEP** - Press to play picture by picture, press play to return to normal.
4. **DVD/USB** - Press to switch between DVD and USB.
5. **MUTE** - Press to mute sound.

REMOTE CONTROL (Cont.)

6. **TITLE** - When using DVD, Press to return to Title Menu.
7. **LEFT** - Left directional arrow
8. **SETUP** - Press to go into setup menu
9. **L/R** - Use only in VCD or CD discs, press to select left or right channel.
10. **PREVIOUS** - In DVD Mode, press to go previous chapter.
11. **VOLUME DOWN** - Decrease Volume
12. **NEXT** - In DVD Mode, press to go to next chapter.
13. **PLAY/PAUSE** - Press to Pause, press again to unpause.
14. **VIDEO** - Switch to video output mode
15. **PROGRAM** - If the disc has two or more tracks, chapters or titles. Set up playing order preference. Press the button to then input the number of the track, title or chapter. If programmed tracks are over 10, press 'NEXT' to go on programming. Use the up/down/left/right keys to move the cursor to START. Press 'ENTER' to start programmed play.
16. **REPEAT** - press repeatedly in DVD mode to scroll through.
17. **PBC** - VCD Mode: Playback Control
18. **LANGUAGE** - Press to select on screen display language
19. **SUBTITLE** - Press to begin showing subtitles.
20. **OPEN/CLOSE** - Press to open or close disc tray.
21. **NUMBERS 0-9/10+** - Use these keys to select desired track for CD.
22. **TIME** - Press to manually set up the time on the DVD player.
23. **MENU** - Press to enter MENU.
24. **UP** - Up directional arrow.
25. **RIGHT** - Right directional arrow.
26. **ENTER** - Confirm your selection.
27. **ZOOM** - Press to Zoom in, press again to zoom out.
28. **DOWN** - Down directional arrow.
29. **N/P** - Switch TV system between NTSC and PAL.
30. **REWIND** - Press to rewind.
31. **VOLUME UP** - Press to increase volume.
32. **FASTFORWARD** - Press to quick forward search.
33. **STOP** - Press to STOP media.
34. **A-B** - Press to repeat certain sections.
35. **CLEAR** - Press to clear input selections.
36. **SLOW** - Press to slow speed playing.
37. **RETURN** - Press to return to menu.
38. **RESET** - Press to reset DVD Player settings.
39. **ANGLE** - Press to change angle in DVD mode.

SETUP

Connecting Video and Audio

Note: Before making or changing any connections, make sure that all the devices are disconnected from the power outlet. Both video and audio connections must be made from the DVD Player to your television.

RCA Stereo Audio Output

1. Use the RCA Stereo Audio Output to send audio from the DVD player to a television.
2. Required an RCA audio cable.
3. Use the RCA audio cable to connect the RCA Stereo Audio Output to an RCA stereo audio input on a television.
4. Adjust the connected televisions input setting to match the input used in the previous step.

YPBPR Output

1. Use the YPBPR output to send high quality audio from the DVD player to an audio system.
2. Requires an YPBPR cable.
3. Use the YPBPR cable to connect the YPBPR Output to a YPBPR input on an audio system.
4. Adjust the connected audio system's input setting to match the input used in the previous step.
5. In the Digital Out portion of the setup menu, adjust to PCM, RAW or off.

Video Output

1. Use the Composite Video Output to send video from the DVD player to a television.
2. Requires an RCA video cable.
3. Use the RCA video cable to connect the Video Output (yellow plug) to a composite video input (yellow) on a television.
4. Adjust the connected televisions input setting to match the input used in the previous step.

HDMI Output

Requires a HDMI cable (not Included)

1. Use a HDMI cable to connect the HDMI Output to a HDMI input on a television.
2. Adjust the connected televisions input setting to match the input used in the previous step.

SETUP (Cont.)

LOADING A DVD OR CD

Loading a Disc

1. Press the Open button to open the Disc Door.
2. Load a disc into the DVD player, label side facing up.
3. Manually close the Disc Door.

After a disc is loaded, it will begin playing automatically.

Playing a Loaded Disc

1. Follow the instructions for Loading a Disc.
2. If the disc does not begin playing automatically, press the Play/Pause button.

Programming a Loaded Disc

1. Follow the instructions for Loading a Disc and Playing a Loaded Disc.
2. While the loaded disc is playing, press the Program button on the remote.
3. Use the Number Keypad to enter in the titles and chapters in the order you want to view them.
DVD Titles and chapters or CD tracks will play in the order they are programmed.
4. Repeat step 3 until the desired DVD titles and chapters or CD tracks are programmed.

USB PORT

Connecting a USB Drive

Connect a USB Drive to the USB Port. Picture formats are supported (Jpeg).

Accessing the Content on a USB Drive

1. Follow the instructions for Connecting a USB thumb drive.
2. Press the DVD/USB button to enter DVD/USB mode.

TROUBLESHOOTING

Symptom	Correction
No power	Plug the power cord into the wall outlet securely
No picture	<ul style="list-style-type: none"> Select the appropriate video input mode on the TV so the picture from the DVD player appears on the screen. Connect a video cable into the jacks securely. Turn on the TV
No Sound	<ul style="list-style-type: none"> Check audio connections. If you are using a HiFi amplifier, try another sound source.
The playback picture is poor	<ul style="list-style-type: none"> Clean the disc. Connect the TV/DVD player colour system.
The DVD player does not start playback	<ul style="list-style-type: none"> Insert a disc, if no disc inside the player Insert a playable disc. (Check the disc type, colour system and Regional code.) Place the disc with the playback side down. Clean the disc. Cancel the Rating function or change the rating level.
Severe hum or noise is heard	<ul style="list-style-type: none"> Wipe them with a cloth slightly moistened with alcohol. Clean the disc. Connect the speakers and components securely Move your TV away from the audio components.
The remote Control does not work properly	<ul style="list-style-type: none"> Point the remote control at the remote sensor of the DVD receiver. Operate the remote control within about 5m Remove obstacle. Replace the batteries with new ones.
Completely distorted picture or no colour	<ul style="list-style-type: none"> If the picture is distorted completely or if the picture rolls vertically make sure the NTSC/PAL setting at the DVD player matches the colour system of your television
The icon appears on screen	<ul style="list-style-type: none"> The DVD's software restricts it. The DVD's software doesn't support the feature (eg. Angles). The feature is not available at the moment.

SPECIFICATIONS

Power Supply	100 - 240V~ 50/60Hz
Compatible Disc Formats	DIVX / MPEG1/2/4/ DVD/DVD-R/DVD+R/DVD+RW/CD/ VCD/SVCD / MP3 / CD-R/CD-RW/JPEG
Signal System	PAL/NTSC/AUTO



CUSTOMER SUPPORT:

info@ayonz.com

DISTRIBUTED BY:

Ayonz Pty Ltd